

elchim®
M I L A N O




Hair curling tool Operating instructions

on respect of

Model:

elchim curler S 19
elchim curler S 25
elchim curler S 32

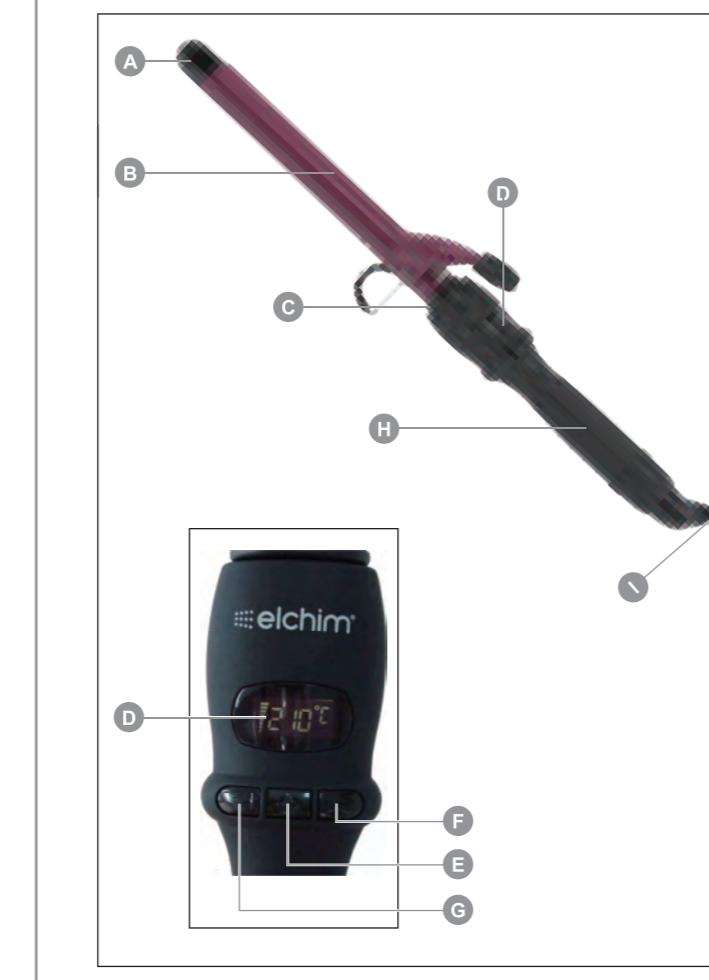

2



A) Cool Tip
B) Barrel
C) Adaptor
D) LCD Cover
E) On/Off Switch
F) Button of increasing temperature
G) Button of decreasing temperature
H) Handle
I) Power Cord

Estremità in materiale isolante
Barra arricciatrice
Adattatore
Display LCD
Pulsante accensione/spegnimento
Pulsante per aumentare temperatura
Pulsante per diminuire temperatura
Impugnatura isolante
Cordone alimentazione

3

ITALIAN

Istruzioni di uso

- Rimuovere il fero elchim curler S dalla scatola, svilgere il cavo e porre l'apparecchio su una superficie piatta, liscia e insensibile al calore.
- Inserire la spina nella presa rete.
- Accendere l'apparecchio premendo il pulsante centrale On/Off (E).
- Selezionare la temperatura desiderata nell'intervallo 80 °C - 210 °C con i pulsanti laterali < - > (G-F).
- La temperatura preimpostata è 180 °C.
- Per incrementare la temperatura premere il pulsante di destra > (F).
- Per diminuire la temperatura premere il pulsante di sinistra < (G).
- Nota: la regolazione della temperatura avviene a passi di 5 °C premendo il relativo pulsante premo. Al rilascio dei pulsanti < >, il Display (D) lampeggerà tre volte. L'indicazione di temperatura si avrà a varcare per poi diventare stabile al raggiungimento del valore prescelto.
- Dopo l'uso, spegnere l'apparecchio mantenendo premuto il pulsante centrale On/Off finché il Display LCD si spegne.
- Disconnettere la spina dalla presa di rete.
- Prima di riportarlo o pulirlo lasciare che l'apparecchio si raffreddi.

Pulizia e cura

- Prima di pulire l'apparecchio disconnetterlo dalla rete e aspettare che si raffreddi.
- Non immergere l'apparecchio o le sue parti in acqua.
- Pulire solamente con un panno delicato eventualmente umidito.
- Non usare solventi o abrasivi.

elchim®
M I L A N O

Elchim SpA. C.so Indipendenza 5 20129 Milano Italy.
elchim@elchim.it www.elchim.it

4

ENGLISH

Operation

- Unfold the base stand and place the appliance on a flat, smooth, non-heat-sensitive surface.
- Connect to the main power supply.
- Using the on/off switch (E), switch on the appliance (Fig. 1).
- Set the desired temperature (80 °C - 210 °C) (176°F - 410°F).
- The preset temperature is 180°C (356°F).
- To increase the temperature, press the + button (F).
- To decrease the temperature, press the - button (G).
- Note: The temperature can be adjusted by 5°C (9°F) at a time by tapping on either of these buttons. To adjust the temperature more quickly, hold down the appropriate button.
- The LCD display flashes three times when the temperature is set. Once the set operating temperature has been reached, the LCD display shows the temperature. The LCD display flashes when the desired temperature has been reached. After the desired temperature has been reached, the flashing stops.
- After use, switch off the appliance with the on/off switch (Fig. 1). Hold the on/off switch to do this. The LCD display must go out.
- Disconnect from the mains power supply.
- Allow the appliance to cool down.

Cleaning and care

- Before cleaning the appliance, disconnect from the mains and allow it to cool down.
- Do not immerse the appliance in water.
- Only wipe the appliance with a soft cloth, which may be dampened slightly. Do not use solvents or abrasives.

elchim®
M I L A N O

Elchim SpA. C.so Indipendenza 5 20129 Milano Italy.
elchim@elchim.it www.elchim.it

5

SG/02/10/09